

How to change the battery on your digital electronic lock.

The 2 most common electronic locks used on ATMs today are shown below; be sure to properly identify which lock you have before attempting to change the battery.

*If your lock is not the same as the examples below, please call RapidCash ATM Network **BEFORE** attempting to change your combination.*



Changing SG Lock Battery

- ① The base of the lock housing below the SG sticker has a raised pull tab, firmly pull the tab towards you **until you hear a click sound.**
- ② Wiggle and **pull down on the tab**, battery assembly will drop down (*in some instances needle nose pliers may be required*).
- ③ Change the **9 Volt** battery.
- ④ Re-insert battery assembly **until tab clicks into place.**

Your battery will need replacement when you start to notice that the keypad works intermittently and numbers entered are not properly registered.

*** a new 9 volt batter is required**



Changing LG (Lagaard, Kaba Mas) Lock Battery

- ① Push up **firmly** with cupped hand on base / bottom of lock assembly.
- ② Lock assembly will “pop off” two pins.
- ③ **9 Volt** Battery can be changed from behind.
- ④ Place assembly on pins and push down to assemble (*exact opposite of removal*).

Your battery will need replacement when you start to hear a series of beeps after you enter your combination successfully.

*** a new 9 volt batter is required**

How to change the lock combination on your digital electronic lock.

The 2 most common electronic locks used on ATMs today are shown below; be sure to properly identify which lock you have before attempting to change the combination.

*If your lock is not the same as the examples below, please call RapidCash ATM Network **BEFORE** attempting to change your combination.*

NOTE:

Always remember to **OPEN** the vault door **BEFORE** changing the combination, failure to do so could result in costly repairs to the vault door should an error occur while modifying the combination.



Changing SG Lock Combinations

- ① **2,2,*** (Change Combo Command)
- ② Current **6-Digit** Combo followed by **#**
- ③ New **6-Digit** Combo followed by **#**
- ④ Repeat new **6-Digit** Combo followed by **#**

Your combination has now been changed.
Test the new combo 2 times before closing the vault and locking.

Factory default code is: **1,2,3,4,5,6,#**



Changing LG/Kaba Mas) Lock Combinations

- ① **0,0,0,0,0,0** (Change Combo Command)
- ② Current **6-Digit** Combo
- ③ New **6-Digit** Combo
- ④ Repeat new **6-Digit** Combo

Your combination has now been changed.
Test the new combo 2 times before closing the vault and locking.

Factory default code is: **1,2,3,4,5,6**